

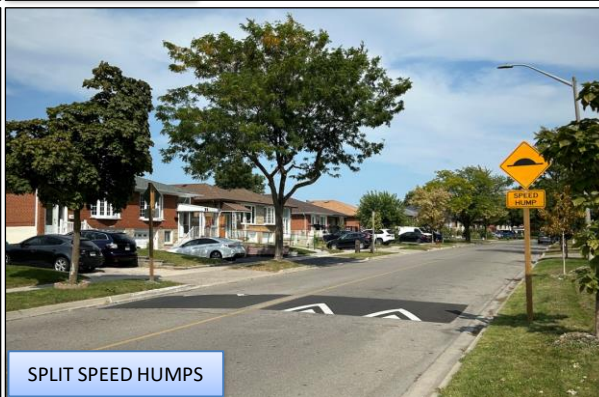


TRAFFIC CALMING DEVICES

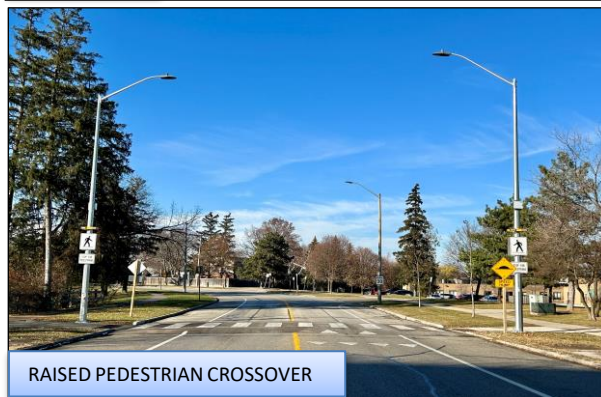

SPEED CUSHION DESIGN

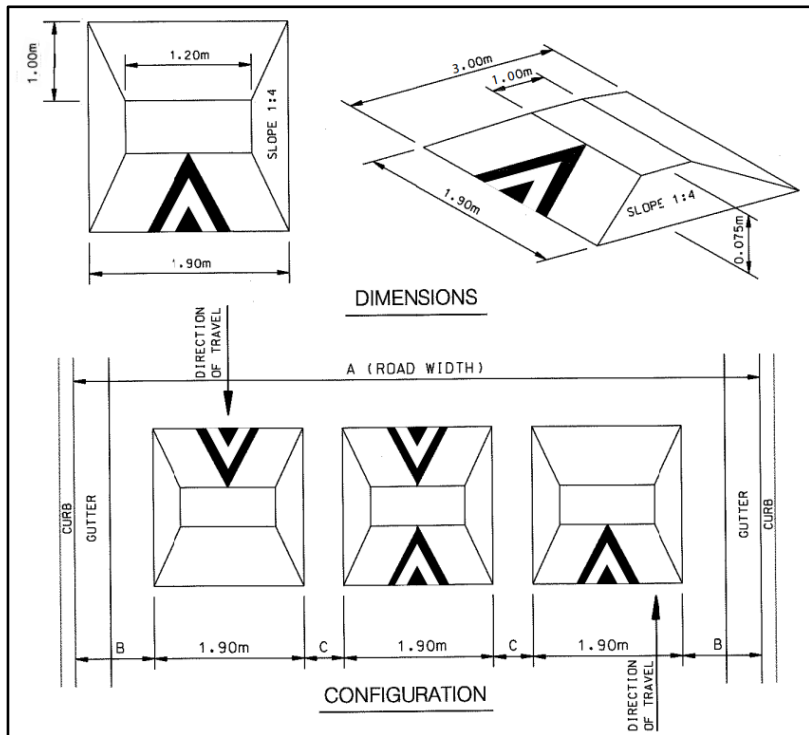


- Raised area on a roadway that does not cover the entire width of the road
- Designed to accommodate wide wheel base of emergency vehicles (easy passage)
- Designed to discourage drivers from travelling at excessive speeds
- A series of speed cushions is more effective than a single installation
- Use on neighbourhood roads

Between Southdown Road and Winston Churchill Boulevard


Between Southdown Road and Winston Churchill Boulevard




Existing Traffic Signal Locations



Existing All-Way
Stop Location



Proposed Speed
Cushion Locations

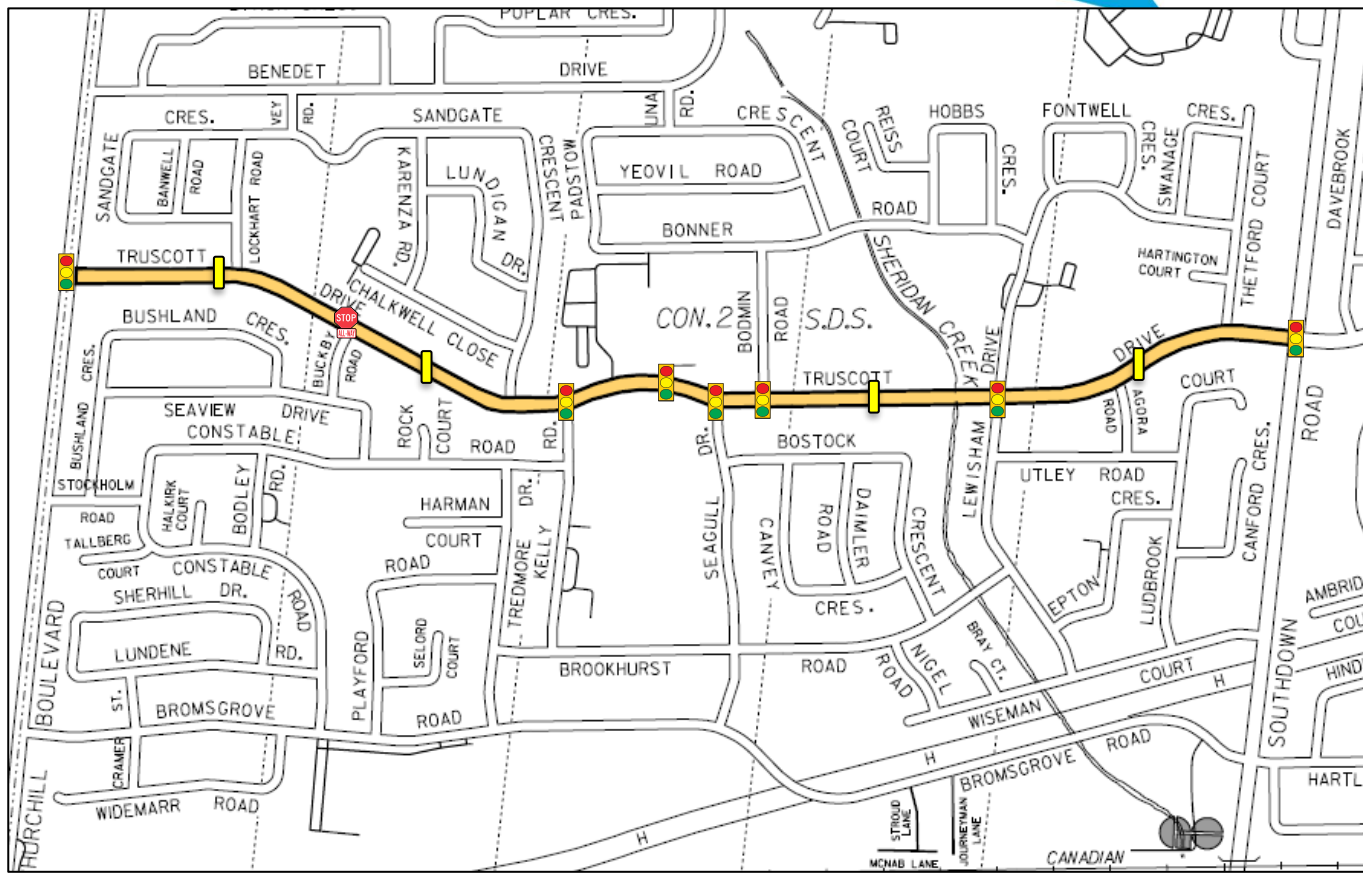

Truscott Drive

Between Southdown Road and Bodmin Road



Truscott Drive

Between Bodmin Road and Winston Churchill Boulevard



Existing Traffic
Signal Locations



Existing All-Way
Stop Location



Proposed Speed
Cushion Locations